

Parts

EX-1745



Effective: March 2014 (Jan., 1998)

Instructions for Replacing Cartridge p/n U3003 in the Ultra-C[™] 20 SCFM Filter

U3003

Assy.

Caution: The dye in the cartridge is permanent. Avoid accidental contamination of other objects.

Instructions:

1. Two stage filters—turn off air supply and drain the filter. This will vent the filter of all compressed air.


Filters with indicator stage only-turn off air supply, vent the filter by opening downstream system to atmosphere.

- 2. Remove the bowl from the top of the filter by unscrewing it.
- 3. Remove the old cartridge by grasping it with a rag and pulling straight up with a slight twisting motion.
- 4. Any contamination of bowl or filter body should be cleaned away.
- 5. Install a new cartridge by pushing it straight down with a twisting motion, until it seats firmly. A small amount of vaseline or Neva-Stain on the o-ring may aid in installing the new cartridge.

Special Note—The bowl is o-ring sealed. Firm hand tightening is adequate.

6. Close all drains and vents, turn on air supply and the filter will start functioning immediately.

Caution: Polycarbonate bowls must be cleaned with soap and water only. Do not use volatile solvents.

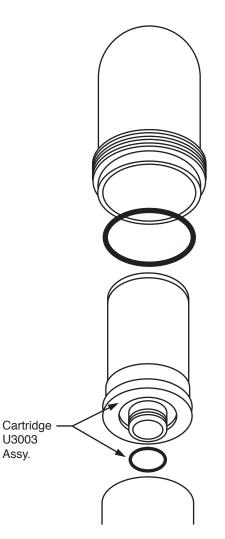



Replacement Parts

EX-1745

Effective: March 2014 (Jan., 1998)

Instructions for Replacing Cartridge p/n U3003 in the Ultra-C[™] 20 SCFM Filter

Caution: The dye in the cartridge is permanent. Avoid accidental contamination of other objects.

Instructions:

1. Two stage filters—turn off air supply and drain the filter. This will vent the filter of all compressed air.


Filters with indicator stage only-turn off air supply, vent the filter by opening downstream system to atmosphere.

- 2. Remove the bowl from the top of the filter by unscrewing it.
- 3. Remove the old cartridge by grasping it with a rag and pulling straight up with a slight twisting motion.
- 4. Any contamination of bowl or filter body should be cleaned away.
- 5. Install a new cartridge by pushing it straight down with a twisting motion, until it seats firmly. A small amount of vaseline or Neva-Stain on the o-ring may aid in installing the new cartridge.

Special Note—The bowl is o-ring sealed. Firm hand tightening is adequate.

6. Close all drains and vents, turn on air supply and the filter will start functioning immediately.

Caution: Polycarbonate bowls must be cleaned with soap and water only. Do not use volatile solvents.

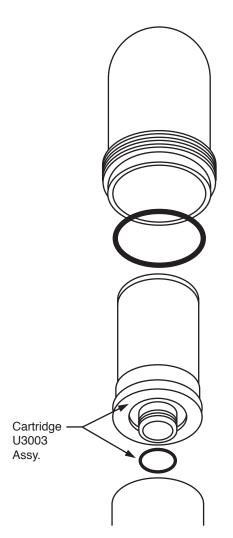



KING-GAGE, A NOSHOK Company | 1010 West Bagley Rd., Berea, OH 44017 Ph 440.243.0888 I www.king-gage.com



KING-GAGE, A NOSHOK Company | 1010 West Bagley Rd., Berea, OH 44017 Ph 440.243.0888 | www.king-gage.com